

Q: How the antenna is operated? Marine Product only

A:

The user interacts with this antenna via the control unit.
It is also possible to switch on/off and to change the satellite via the receiver.

The following menu items are available:

- Standby (Switch on/off)
- Autosat (satellite 1 to 4 is chosen by the receiver)
- Sat 1 (selection of satellite 1)
- Sat 2 (selection of satellite 2)
- Sat 3 (selection of satellite 3)
- Sat 4 (selection of satellite 4)
- Setup (Setup menu)
 - o Tracking (tracking can be switched off, e.g. in the harbour to limit the antenna noise)
 - o Fastscan (advanced search algorithm, default off, because not necessary in Europe)
 - o LNB type (selection of linear or circular LNB)
 - o New Sat (search for new satellite)
 - o Upd Sat (update satellite data)
 - o Del Sat (delete satellite data)
 - o Comp Cal (calibrates internal compass)