

Q: What is important during the installation ?

A: Please choose a stable place, which has a free sight to the satellite and which is not near to RADAR and communication antennas. The antenna can be connected to every power distribution with 12/24/32 volts without any converter. The power circuit has to be fused with at least 5 amperes and at maximum 7 amperes. Furthermore a potential equalization has to be done